



Ergotron® 300 Series

adding greater range of movement

Highlights


- Vertical adjustment range of up to 20" (508 mm)
- Easily position the height and angle of your monitor and keyboard for maximum comfort and productivity
- Compact design frees up space
- Patented Pivot-ease® system provides long-life monitor adjustment while maintaining touch-screen stability
- Handles most flat panel monitors up to 28 lbs (12.7 kg)
- Keyboard Arm has a 16" (406 mm) vertical adjustment range. Keyboard and/or Laptop Trays are available
- Combine with multiple Extensions for telescopic motion
- Arm attaches to virtually any vertical or horizontal surface
- Rugged construction ensures long-lasting durability
- Integral cable management system organizes and routes cables neatly
- VESA® Flat Display Mounting Interface (FDMI™) Standard compliant for easy monitor attachment
- 5-year warranty



Attach your flat panel monitor to the 300 Series Arm and free up work space while adding greater range of movement. Lift, swing, tilt or turn your flat panel monitor, laptop, or keyboard for maximum efficiency and ergonomic comfort. Arms fold back out of the way when you need more access to your worksurface.

The 300 Series Arm is designed to interface with Ergotron's modular line of 200 Series products. Combining a 300 Arm with a 200 Extension allows for both vertical and telescoping movement. You can easily customize a 300 Arm solution from a wide selection of interchangeable components.



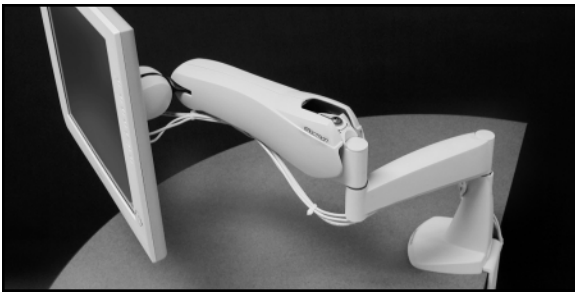


Integrated Cable Management: Neatly organize and route cables. 300 Series Arm configurations can be attached to walls, slatwalls, desks, machines, carts, poles—virtually anywhere!



300 Series Arm Desk Clamped to cubical furniture.

300 Series Arm with Extension offers greater range of movement.

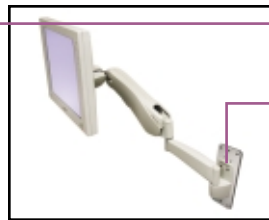

300 Series Arm mounted to pole.

300 Series Arm with one Extension, mounted to Wall Plate.

Common Configurations:

Select one of our many pre-configurations or build your own. Order a Vertical Mount for all vertical surface applications. Desk Mounts attach to worksurfaces with either the Desk Clamp or the Grommet Mount. Desk Clamps attach to the edge of worksurfaces $\leq 2\text{-}1/8"$ (54 mm) thick. Grommet Mounts attach through a hole in the worksurface $3/8"$ to $3"$ (10 to 76 mm) wide, up to $4"$ (102 mm) thick.

Vertical Mounts



45-087-xxx, Vertical Mount Arm




28-170-xxx, Vertical Mount Arm with 9" Extension

Desk Mounts



45-088-xxx, Desk Mount (Clamp/Grommet) Arm

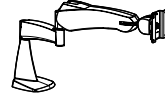


28-171-000, Desk Mount (Clamp/Grommet) Arm with 9" Extension


NOTE: Specify the color you want by changing the last three digits in the part number. 200 for black and 180 for grey.

Desk Mount Attachment

Desk Clamp

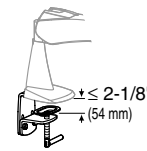


Grommet Mount

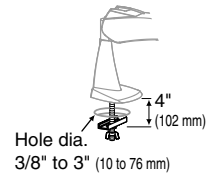


Both the Desk Clamp and Grommet Mount bases are included with the Desk Mount option.


Range of Motion:

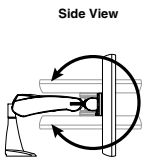


180° monitor tilt

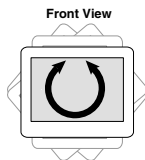


360° portrait/landscape (P/L)

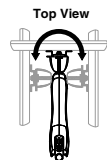

180° monitor side-to-side range

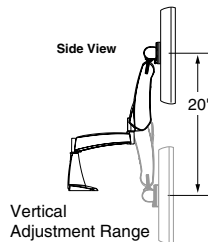


Vertical Adjustment Range

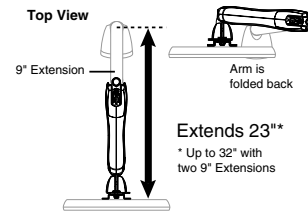


Extends 23"*
* Up to 32" with two 9" Extensions

Combine the 300 Arm with 200 Extensions for an optimum range of motion.


General Dimensions:

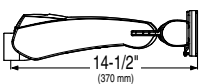

Double Pivot with Portrait/Landscape (P/L): 20° of Vertical Adjustment, 180° Monitor Tilt, 180° of Side-to-Side Pivot, and 360° of P/L

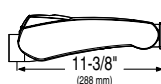

Keyboard Arm: Order the Keyboard Tray, Laptop Tray and accessories separately

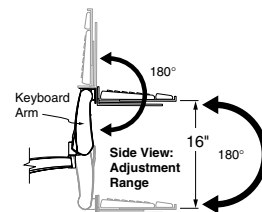

Side View: Adjustment Range

Basic Specifications:

Application Options: Slatwalls, Wall Track, Wall Plate, Direct Mount, Command Post, Desk Clamp, Grommet Mount, and Pole Mount

Monitor Interface Pad Options:

- VESA MIS-D, 100/75, C
- Custom Interface Plate (contact Ergotron for details and availability)

Colors: Available in black or grey

Weight Capacity: 23 to 28 lbs (10.4 to 12.7 kg) per monitor. The capacity is based on the center-of-gravity of the monitor not exceeding 1" (25 mm) from the end of the Arm.

Accessory Options: Extensions, Rotation Control Kit, Quick Release Interface, Keyboard Trays, Laptop Trays, Wrist Rests, Mouse Pads, Mouse Pouches, CPU Holders, Surge Suppressors and Power Strips

© 2003 Ergotron, Inc.
rev. 09/16/2003 870-05-038

Ergotron, Inc.: St. Paul, MN; (800) 888-8458;
www.ergotron.com; sales@ergotron.com

Ergotron Europe: Amsterdam, The Netherlands;
Tel. +31 20 312.29.39; info.eu@ergotron.com

Ergotron Canada: Calgary, Alberta;
(800) 267-9912; info.ca@ergotron.com

