




### Highlights

- Ultra-slim design places display only 3,2 cm (1.25") from wall
- Simple 3-step installation
- Universal design fits most 32–61" flat panels up to 79 kg (175 lbs)
- Easily connect and detach display
- Integrated security fasteners deter removal
- Includes fasteners for mounting to wood studs or concrete wall surfaces
- 5 year warranty

# Ergotron® WM



## Large Display Low Profile Wall Mount

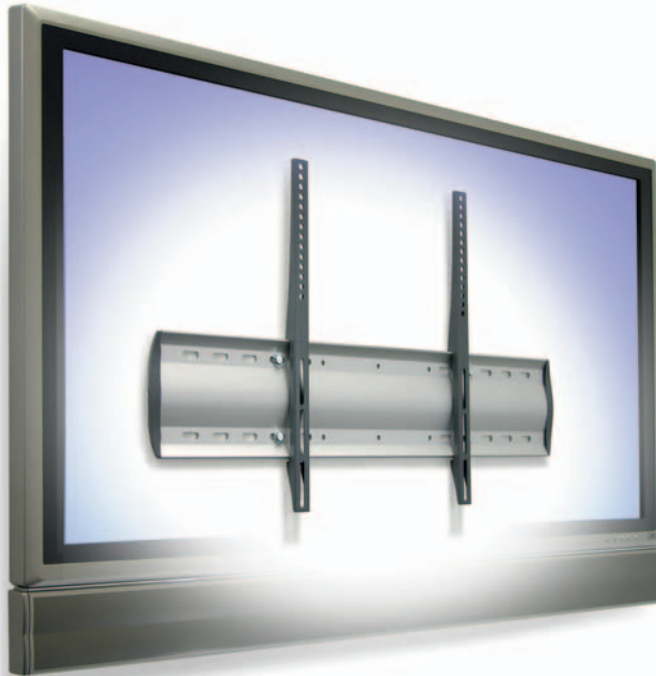

Don't be intimidated by mounting your plasma or LCD display or TV. This ultra-slim design hangs your flat panel TV just over 3 cm from the wall for an extremely slim profile. Yet the Ergotron Low Profile Wall Mount costs about half of competing models.

Engineered to install in three easy steps, the Ergotron Low Profile Wall Mount is sturdy and stable. It accommodates most flat panel displays up to 175 lbs, and the security fasteners help protect your TV from theft.

- Universal design fits most flat panel screens from 32 to 61 inches
- Easily connects and detaches, but security fasteners deter removal
- Sleek, silver and charcoal grey design complements home or office decor
- Excellent price performance
- Includes fasteners for mounting to wood studs or concrete

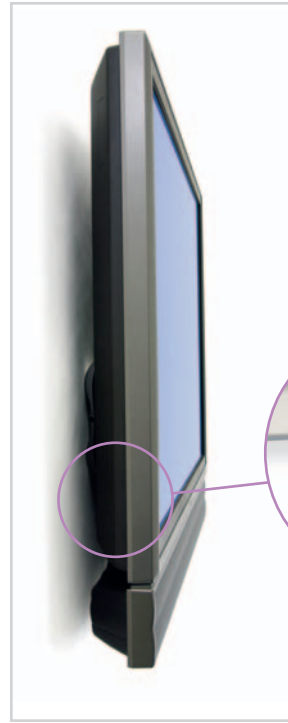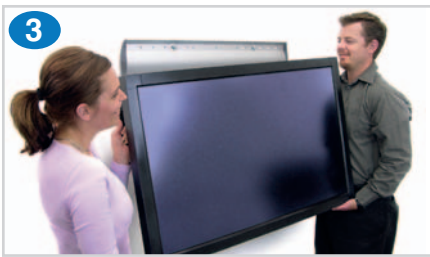

## Simple Installation


3-step process:

1. Attach wall plate to chosen location on wall
2. Attach mounting brackets to display
3. Hang display on wall plate

Security fasteners on mounting brackets prevent easy removal of the display.

Extremely low-profile design.

1.25"  
(32 mm)

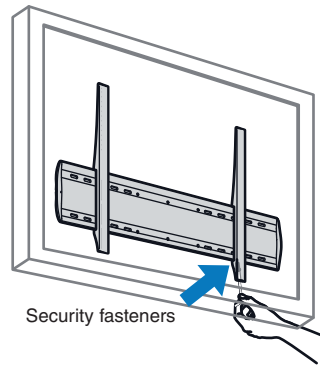

Security fasteners

## Basic Specifications

### Description and Model:

Large Display Low Profile Wall Mount, model WM00VH1S  
 Consumer Part Number: 60-581-003 (silver)  
 Commercial Part Number: 60-578-003 (silver)

### Attachment Options:

Wall plate attaches to vertical wall surfaces. Includes fasteners for wood (16" or 24" centered studs) or concrete wall mounting. For mounting to metal studs or other surfaces, customer must supply fasteners.

**Weight Capacity:** 79 kg (175 lbs)

**Shipping Weight:** 5,0 kg (11 lbs)

**Product size (mounted):** 847 x 471 x 32 mm  
 (33.35" W x 18.54" H x 1.25" D)

### Display Interface Options:

Mounts to most large displays based on the mounting hole spacing range below:

- Horizontal—100 mm (min.) to 750 mm (max.)
- Vertical—100 mm (min.) to 450 mm (max.)

**Warranty:** 5 years