



Highlights



- View multiple monitors simultaneously with patented Paraview Technology
- Position your monitors for maximum comfort and productivity
- Portrait or landscape viewing
- Weight capacity up to 31 lbs (14 kg) per monitor
- Low-profile base saves desk space
- Durable aluminum and steel construction creates extremely stable platform
- Cable management system organizes and routes cables
- Easily attaches to LCDs that are VESA® MIS-D, 100/75, C compliant
- Five-year warranty

Ergotron® DS100 Series

Space-saving desk stands



A multi-display viewing station that increases productivity and saves space


Conserve desk space by suspending up to five flat panel monitors on a single base. Easily view multiple screens at once to increase productivity. Choose between five configurations, or customize your own solution with the DS100's line of modular component parts. Free standing, desk clamp and grommet mount bases are available.



Cables are guided cleanly through cable channels (left).

Monitor height can be adjusted on pole (33-091-200 shown).

28" pole (20-137-200) also available, order separately.

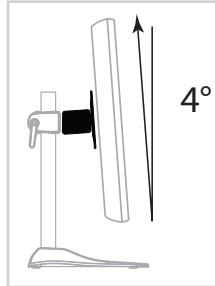

Monitors can be aligned into a seamless curved profile to benefit viewing.

Monitor shown installed with 4° upward angle (illustration).






Sleek, low-profile base with durable finish provides stability and saves space.



Set-up Options

Multiple monitors can be arranged in a parabola with Ergotron's patented Paraview Technology. This layout increases data visibility, maintains a single focal length for viewer's eyes (less work for eye muscles), and utilizes available space efficiently. Install monitors with 4° offset: position them inward, upward or downward for optimized viewing conditions. Monitors can be adjusted to different heights on the pole to accommodate user preference.

Additional components available

					
	DS100 Dual-Monitor Desk Stand Horizontal	DS100 Dual-Monitor Desk Stand Vertical	DS100 Triple-Monitor Desk Stand Horizontal	DS100 Quad-Monitor Desk Stand	DS100 Quad-Monitor Desk Stand Horizontal
Part # (color)	33-322-200 (black), available Americas, EMEA	33-091-200 (black)	33-323-200 (black), available Americas, EMEA	33-324-200 (black)	33-325-200 (black)
Includes	Base, 14" pole, Paraview bow, two (2) sliding brackets. Grommet mount base also available (60-350-200), order separately.	Base, 28" pole, Paraview bow, two (2) sliding brackets. Grommet mount base also available (60-350-200), order separately.	Base, 14" pole, Paraview bow, two (2) sliding brackets, one (1) angled center bracket, one (1) flat center bracket. Grommet mount base also available (60-350-200), order separately.	Base, 28" pole, two (2) Paraview bows, four (4) sliding brackets. Grommet mount base also available (60-350-200), order separately.	Two (2) Bases, Two (2) 14" poles, Paraview Bow, four (4) sliding brackets. Grommet mount base also available (60-350-200), order separately.
Typical LCD Size	≤ 24" Maximum LCD outside width 23 3/4" (59 cm)	≤ 24"	≤ 21" (53 cm) Maximum LCD outside width 20" (51 cm)	≤ 24" Maximum LCD outside width 23 3/4" (59 cm)	≤ 17" Maximum LCD outside width 16" (40,6 cm)
<small>LCD SIZE IS APPROXIMATION. DIMENSION IS DIAGONAL MEASUREMENT OF SCREEN. LCD SIZE MAY BE EXCEEDED AS LONG AS SCREEN WEIGHT DOES NOT EXCEED MAXIMUM WEIGHT CAPACITY OF THE MOUNT.</small>					
Weight Capacity	31 lbs (14 kg) per LCD	23 lbs (10,4 kg) per LCD	31 lbs (14 kg) per LCD	31 lbs (14 kg) per LCD	31 lbs (14 kg) per LCD
Lift	—	—	—	—	—
Tilt	—	180°	—	—	—
Pan	—	180°	—	—	—
Rotation	360° Portrait to landscape screen rotation	360° Portrait to landscape screen rotation	360° Portrait to landscape screen rotation	360° Portrait to landscape screen rotation	360° Portrait to landscape screen rotation
VESA	MIS-D	MIS-D	MIS-D	MIS-D	MIS-D
Warranty	5 years	5 years	5 years	5 years	5 years

© 2010 Ergotron, Inc. rev. 12/01/2010 e-05-030 Content is subject to change without notification

Americas Sales and Corporate Headquarters

St. Paul, MN USA
(800) 888-8458
+1-651-681-7600
www.ergotron.com
sales@ergotron.com

EMEA Sales

Amersfoort, The Netherlands
+31 33 45 45 600
www.ergotron.com
info.eu@ergotron.com

APAC Sales

Tokyo, Japan
www.ergotron.com
apaccustomerservice@ergotron.com

Worldwide OEM Sales

www.ergotron.com
info.oem@ergotron.com

