



Ergotron® FX Series

low-profile mounting solution



Highlights


- Places monitor less than 1" from wall (FX30 & FX75); 3-1/2" for the FXT75
- Allows monitor or large display to be attached to or removed from wall quickly and easily
- Solid and stable platform for touch-screen monitor compatibility
- Maximum weight capacities up to 75 lbs (34.1 kg) for select configurations*
- Steel construction for long-lasting durability
- FX Series products can be attached to most any sturdy vertical surface such as machines, walls, cabinets, etc. The FX75 and FXT75 also may be pole mounted or used with the Ergotron Command Post
- VESA® Flat Display Mounting Interface (FDMI™) Standard compliant for easy monitor attachment
- LIFETIME warranty; five-year warranty on FXT75 pivot

* See Weight Capacity section on opposite side for more information.

The FX Series products FX30, FX75, and FXT75 allow a flat panel monitor or large display to be mounted to a vertical surface like a picture hung on a wall. Once installed, these modules provide a rock-solid platform, even for monitors with touch-screen capability. To remove a monitor from the wall, the user simply moves the quick-release lever to the side and lifts off the monitor. Reinstallation is just as easy!

The FXT75 provides for up to 25 degrees (+20°/-5°) of tilt capability for large displays weighing between 30 and 75 lbs. The unique patent pending tilt mechanism design provides for smooth (finger-touch) continuous tilt adjustment whether wall or pole mounted.

FX30 Mounting Bracket (up to 30 lbs monitors):

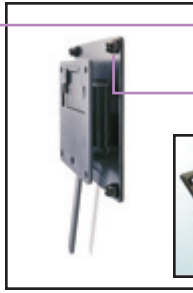

FX30 places monitor only .77" (20 mm) from wall for an extremely low profile.


Mounts directly to surface, (fasteners for mounting unit to wall are customer supplied).

VESA® MIS-D, 100/75, C Standard plate attaches directly to the back of compliant monitors.

Quick-release lever for easy attachment and removal of monitor.




60-239-007: FX30 – Both the 75 mm and 100 mm Interfaces ship standard with product.

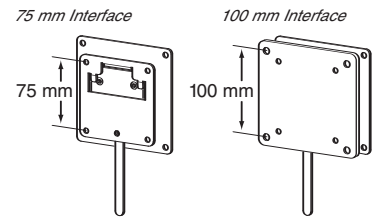

Fasteners for mounting unit to wall are customer supplied.

FX75 Mounting Bracket (up to 75 lbs displays):

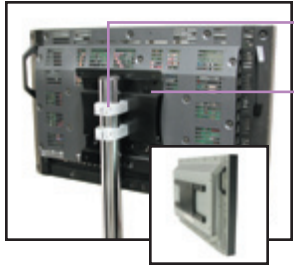


FX75 may be mounted directly to a vertical surface, pole, or Ergotron Command Post.

VESA® MIS-E, C Standard plate attaches directly to the back of compliant monitors. Additional mounting interface brackets are available from Ergotron (see Mounting Interface Options below and inset photo).

FX75 places display less than 1" (25 mm) from wall for an extremely low profile.*
Unique quick-connect design latches monitor in place with touch-screen stability.





60-494-200: FX75 – Standard VESA MIS-E, 200 x 100 mm monitor mounting. Additional mounting interface brackets are available from Ergotron (see Mounting Interface Options below).

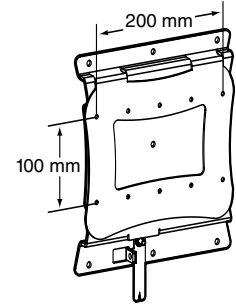

Fasteners for mounting unit to wall are customer supplied.

FXT75 Mounting Bracket (up to 75 lbs displays):

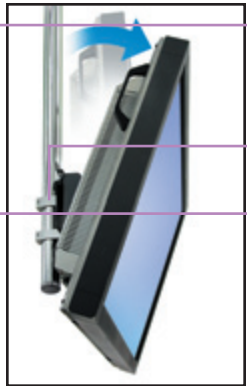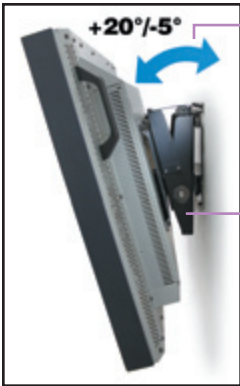


The FXT75 (patent pending) tilt mechanism allows the monitor to tilt forward 20 degrees and tilt backwards five degrees all with a smooth (finger-touch) motion.

FXT75 may be mounted directly to a vertical surface, pole, or Ergotron Command Post.

FXT75 places display less than 3-1/2" (89 mm) from wall for a low profile.*

*FX75 or FXT75 using a VESA MIS-F Interface Bracket will increase in depth from the wall by 3/4" to 1-3/8" (19 to 35 mm) depending on which Interface Bracket is used. See the Flat Panel Orderguide (870-03-005) on our website for more information.

60-521-200: FXT75 – Standard VESA MIS-E, 200 x 100 mm monitor mounting. Additional mounting interface brackets are available from Ergotron (see Mounting Interface Options below).

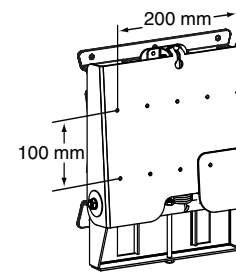

Fasteners for mounting unit to wall are customer supplied.

Basic Specifications:

Application Options:

- FX30: Vertical Surfaces
- FX75 & FXT75: Vertical Surfaces, Command Posts, Pole Mounting

Monitor Interface Options:

- FX30: VESA MIS-D, 100/75, C
- FX75 & FXT75: VESA MIS-E, C (Standard)
- VESA MIS-F Interface Brackets are available for the following VESA patterns:

200 x 200 mm	400 x 200 mm	600 x 200 mm	800 x 400 mm
	400 x 400 mm	600 x 400 mm	

Weight Capacity:

- FX30: 30 lbs (13.6 kg)
- FX75: 75 lbs (34 kg)
- FXT75: 30-75 lbs (13.6-34 kg)[†]

[†] Weight capacity of 75 lbs (34 kg) is for a monitor/display with a maximum thickness of 5-1/2" (140 mm). Also, if using the VESA MIS-F Interface Brackets, these will impact the weight capacity of the FXT75. For further information regarding the weight capacity of the FXT75, see the Flat Panel Orderguide (870-03-005) on our website.

Accessory Options (mounted separately): Pole-Mount Brackets, Command Post Brackets, Keyboard Holders, Wrist Rests, Mouse Pads, Mouse Pouches, CPU Holders, Surge Suppressors and Power Strips

© 2006 Ergotron, Inc.
rev. 08/25/2006 870-05-034

Ergotron, Inc.: St. Paul, MN; (800) 888-8458;
www.ergotron.com; sales@ergotron.com

Ergotron Europe: Amersfoort, The Netherlands;
Tel. +31 33 45 45 600; info.eu@ergotron.com

Ergotron Asia: (800) 468-3917 ext. 7617;
info.apac@ergotron.com

