



Ergotron® HD Series Pivots

Fixed Height Systems




Highlights

- Easily position your monitor for maximum comfort and productivity
- Patented pivot system provides premium long-life monitor adjustment while maintaining touch-screen stability
- Weight capacity up to 45 lbs or more (depending on monitor thickness)
- Multiple interfaces allow the HD Pivots to mount to virtually any vertical surface
- Rugged construction ensures long-lasting durability
- VESA® Flat Display Mounting Interface (FDMI™) Standard compliant for easy monitor attachment
- Available Adapter Plate Kit for 200 x 100 mm monitor interface hole pattern

Add a greater range of movement to your large flat panel monitor(s) with HD Pivots! Select the low-profile HD Pivot for single large displays that require up/down and right/left tilt—perfect for space restricted areas. The HD Pivot with 9" or 5" Extension allows you to extend and retract the monitor. For mounting to 1-1/2" diameter poles choose the HD Pivot with 7" pole Mount Extension—Ergotron offers a complete system of pole mounting options.

HD Series Pivots attach to virtually any vertical surface, and are constructed in the Ergotron tradition of high quality and reliability.

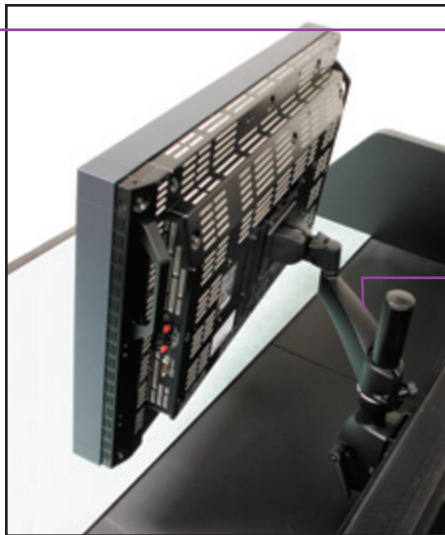

HD Pivots are compatible with monitors that are VESA-compliant. Simply remove the existing base of monitor; match up the hole pattern (100 x 100 mm), and attach the monitor to the pivot. For VESA MIS-E, C, order separately 200 x 100 Adapter Plate Kit, 97-197-200.

Pole mount configuration: An Ergotron slatwall bracket and Pole Clamp with a 1-1/2" pole is attached to the slatwall desk. The HD Monitor Pivot with 7" Pole Mount Extension mounts to this slatwall base.



HD Pivot with 9" Extension attached to Wall Plate. Pivot attaches directly to vertical surface, although Wall Plate (97-101-003) is recommended since it displaces the weight of the monitor across a wider area.



HD Pivot with 5" Extension using 200 x 100 mm Adapter Plate Kit.

Wall Track and Wall Track Bracket, ordered separately, allow the vertical mount base of the pivot to be attached at any height on Track.

Range of Motion, Weight Capacity & Monitor Interface:

HD Monitor Pivots:

- Pivots 180° right/left and up/down
- Monitor weight = see chart below
- Arm swings 180° right/left
- Monitor Interface: VESA MIS-D, 100, C, or VESA MIS-E, C (requires 200 x 100 mm Adapter Plate Kit)

HD Monitor Pivots with Extensions:

- Pivots 180° right/left and up/down, 5" or 9" Extension
- Monitor weight = see chart below
- Arm swings 180° right/left
- Monitor Interface: VESA MIS-D, 100, C, or VESA MIS-E, C (requires 200 x 100 mm Adapter Plate Kit)

HD Monitor Pivots with 7" Pole Mount Extension:

- Pivots 180° right/left and up/down, 7" Extension
- Monitor weight = see chart below
- Arm swings 180° right/left
- Attaches to 1-1/2" diameter poles
- Monitor Interface: VESA MIS-D, 100, C, or VESA MIS-E, C (requires 200 x 100 mm Adapter Plate Kit)

Weight Capacity HD Pivots	
Monitor Thickness	Monitor Weight
4" (102 mm)	40 lbs (18.1 kg)
3-1/2" (89 mm)	43 lbs (19.5 kg)
3-1/4" (83 mm)	45 lbs (20.4 kg)
3" (76 mm)	48 lbs (21.8 kg)
2-1/2" (64 mm)	53 lbs (24 kg)

Basic Specifications:

Application Options: Wall Track, Wall Mounting Bracket, Command Post and 1-1/2" Pole configurations

Monitor Interface Pad Options: See above

Colors: Available in black or grey

© 2006 Ergotron, Inc.
rev. 08/25/2006 870-05-053

Ergotron, Inc.: St. Paul, MN; (800) 888-8458;
www.ergotron.com; sales@ergotron.com

Ergotron Europe: Amersfoort, The Netherlands;
Tel. +31 33 45 45 600; info.eu@ergotron.com

Ergotron Asia: (800) 468-3917 ext. 7617;
info.apac@ergotron.com

