


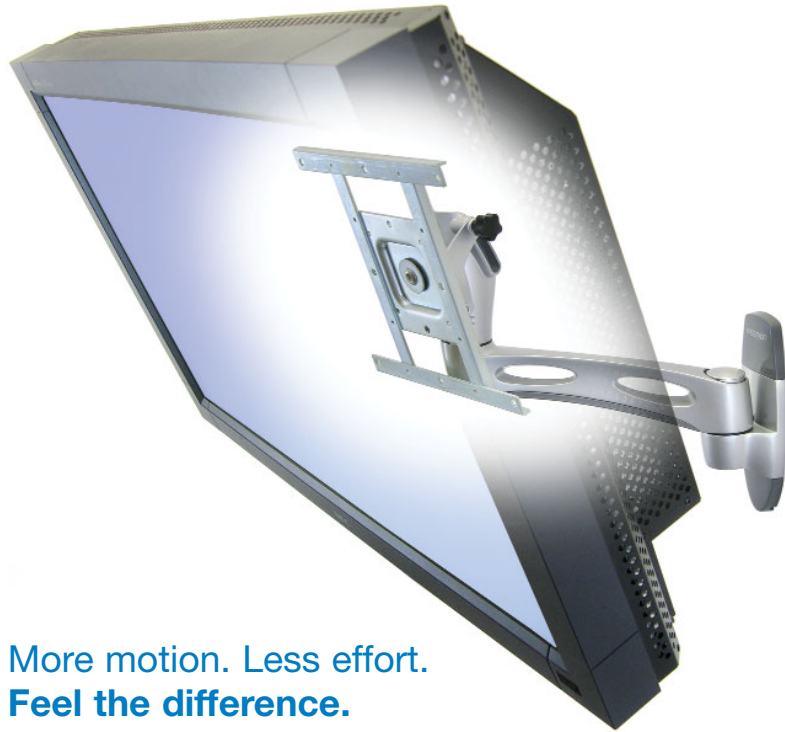


Highlights

- *Constant Force (CF) patented motion technology produces smooth tilt adjustment—set display in position with just a light touch*
- 
- *Position your LCD or TV for maximum comfort and productivity*
 - *Fits 19" to 32" VESA-complaint LCDs weighing up to 50 lbs*
 - *Up to 20° of smooth continuous tilt adjustment (15° forward/5° back)*
 - *Up to 360° of pan motion with the Swing Arm, 40° on the Pivot*
 - *Allows display to be rotated for portrait or landscape viewing*
 - *Compatible with multiple VESA hole-mounting patterns: 75 x 75, 100 x 100, 100 x 200, 200 x 200 mm*
 - *Tested to four times its maximum weight capacity as required by UL Standard 1678—do not exceed 50 lbs in actual use*

Ergotron® Neo-Flex HD

Wall Mount Pivot and Swing Arm



More motion. Less effort. Feel the difference.

Ergotron's Neo-Flex HD mounts offer a flexible alternative to rigid wall mounts for LCD displays or TVs weighing up to 50 lbs (23 kg). Embedded with Ergotron's patented CF technology, the Neo-Flex HD Wall Mount enables effortless screen adjustment for optimal viewing comfort. These dependable solutions secure your flat panel investment while their sleek design elegantly complements home or office décor. Neo-Flex HD mounts offer reliability, quality and design at a genuinely competitive price.

- Effortless adjustment for premium viewing
- Secure your display investment with a quality and reliable solution
- Aesthetics make it the perfect accessory for the home or office
- Swing Arm extends LCD out from the wall 13" for comfortable viewing
- Excellent price performance—most affordable wall mount solution for medium displays



Patented CF pivot motion technology produces smooth tilt adjustment

Screen's viewing angle is easily adjusted for each user

Cables are guided along underside of arm



Tilt lock-down feature also provides tilt tension for odd-sized displays that have an extremely forward center of gravity

Arm folds flat against wall (see left)


Sleek and strong—Neo-Flex HDs have been tested to four times their maximum weight capacity as required by UL Standard 1678 (do not exceed 50 lbs in actual use)

Simple 3-Step Install Process

1. Attach wall base to wall
2. Attach mounting brackets to display
3. Hang display on wall base



Range of Motion

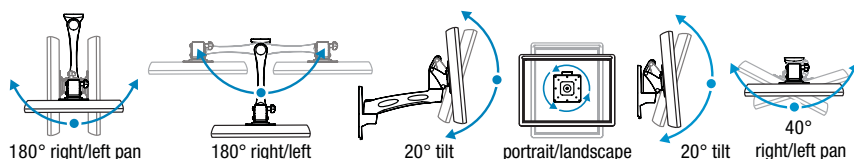

Basic Specifications

Descriptions: Neo-Flex HD Wall Mount Pivot
 Commercial Part Number: 45-195-194 (silver)

Neo-Flex HD Wall Mount Swing Arm
 Commercial Part Number: 45-194-194 (silver)

Weight Capacity: 50 lbs (22.6 kg)

Shipping Weight: 5.5 lbs (2.5 kg) for 45-194-194
 4.6 lbs (2.1 kg) for 45-195-194

Warranty: 3 years

Attachment Options: Wall base attaches to vertical wall surfaces. Includes fasteners for wood studs or concrete wall mounting. For mounting to metal studs or other surfaces, customer must supply fasteners.

Display Interface Options: Compatible with the following VESA hole-mounting patterns: 75 x 75, 100 x 100, 100 x 200, 200 x 200 mm (covers most VESA-compliant 19" to 32" LCDs)

© 2009 Ergotron, Inc.
 rev. 10/05/2009 870-05-066

Content is subject to change without notification.

Ergotron, Inc.: St. Paul, MN; (800) 888-8458;
 www.ergotron.com; sales@ergotron.com

Ergotron Europe: Amersfoort, The Netherlands;
 Tel. +31 33 45 45 600; info.eu@ergotron.com

Ergotron Asia: (800) 468-3917 ext. 7617;
 apaccustomerservice@ergotron.com

