




Highlights

- Constant Force (CF) patented motion technology produces smooth tilt adjustment—set display in position with just a light touch
- Position your LCD or TV for maximum comfort and productivity
- Fits VESA-compliant LCDs $\leq 42"$ weighing up to 50 lbs (23 kg)
- Up to 20° of smooth continuous tilt adjustment (15° forward/5° back)
- Up to 360° of pan motion with the Swing Arm, 40° on the Pivot
- Allows display to be rotated for portrait or landscape viewing
- Compatible with multiple VESA hole mounting patterns: 75 x 75, 100 x 100, 100 x 200, 200 x 200 mm
- Tested to four times its maximum weight capacity as required by UL Standard 1678—do not exceed 50 lbs in actual use

Ergotron® Neo-Flex HD

Wall Mount Pivot and Swing Arm

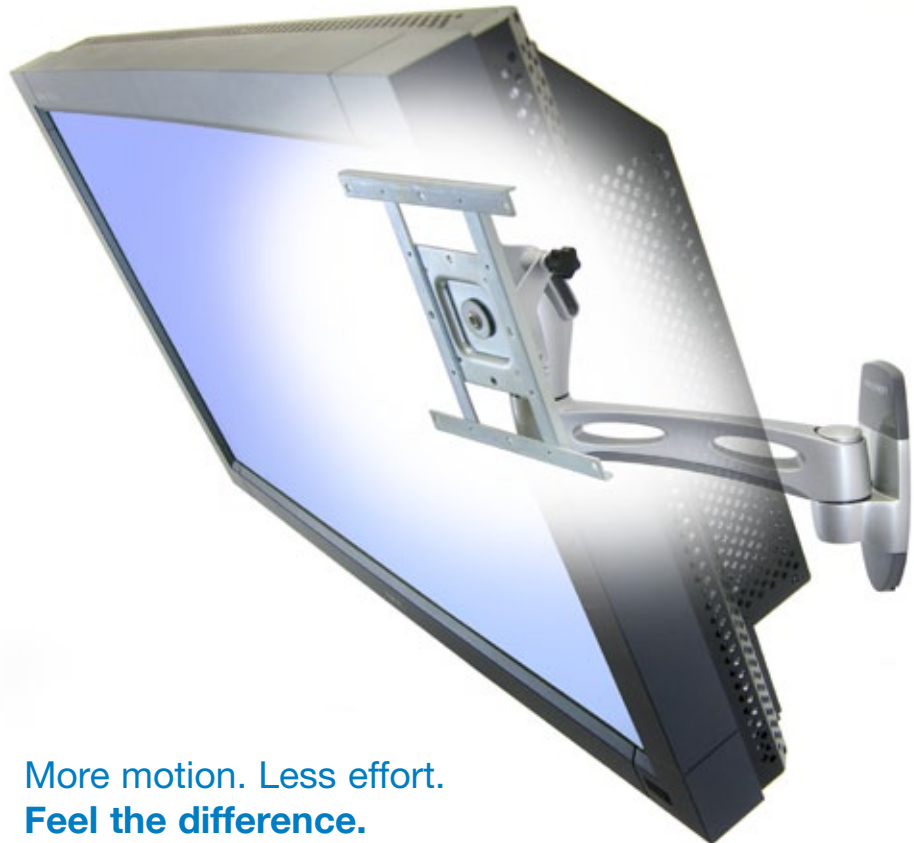

More motion. Less effort. Feel the difference.

Ergotron's Neo-Flex HD mounts offer a flexible alternative to rigid wall mounts for LCD displays or TVs weighing up to 50 lbs (23 kg). Embedded with Ergotron's patented CF technology, the Neo-Flex HD Wall Mount enables effortless screen adjustment for optimal viewing comfort. These dependable solutions secure your flat panel investment while their sleek design elegantly complements home or office décor. Neo-Flex HD mounts offer reliability, quality and design at a genuinely competitive price.

- Effortless adjustment for premium viewing
- Secure your display investment with a quality and reliable solution
- Aesthetics make it the perfect accessory for the home or office
- Swing Arm extends LCD out from the wall 13" (33 cm) for comfortable viewing
- Excellent price performance—most affordable wall mount solution for medium displays



Patented CF pivot motion technology produces smooth tilt adjustment
Screen's viewing angle is easily adjusted for each user

Sleek and strong—Neo-Flex HDs have been tested to four times their maximum weight capacity as required by UL Standard 1678 (do not exceed 50 lbs in actual use)



Cables are guided along underside of arm



Arm folds flat against wall



Tilt lock-down feature also provides tilt tension for odd-sized displays that have an extremely forward center of gravity



Simple 3-Step Install Process

- ① Attach wall base to wall
- ② Attach mounting brackets to display
- ③ Hang display on wall plate



Swing Arm LCD Size	Weight Capacity	Lift	Tilt	Pan	Rotation	VESA
≤ 42"	≤ 50 lbs* ≤ 23 kg	—	20°	360°	360° P/L	MIS-D/E/F**

Pivot LCD Size	Weight Capacity	Lift	Tilt	Pan	Rotation	VESA
≤ 42"	≤ 50 lbs* ≤ 23 kg	—	20°	40°	360° P/L	MIS-D/E/F**

*Display depth greater than 4" (10 cm) may diminish capacity.

**VESA MIS-D, 75/100 (hole pattern = 100 x 100 mm & 75 x 75 mm), MIS-E (hole pattern = 200 x 100 mm), MIS-F (hole pattern = 200 x 200 mm ONLY). Optional VESA Bracket Adaptor Kit (97-474) can be ordered separately for MIS-F interface with hole pattern = 400 x 200 mm

LCD Size is approximation. Dimension is diagonal measurement of screen. LCD Size may be exceeded as long as screen weight does not exceed maximum weight capacity of the mount.

Product Name	Neo-Flex HD Wall Mount Swing Arm 45-194-194 (silver)
Part Number	Neo-Flex HD Wall Mount Pivot 45-195-194 (silver)
Product Includes	Hardware for mounting to wood stud or concrete wall
Depth	3.7" (9,1 cm)
Shipping Dimensions	45-194-194: 12.5" x 7.75" x 4.5" (31,8 x 19,7 x 11,4 cm) 45-195-194: 9" x 9" x 3.9" (22,9 x 22,9 x 9,9 cm)
Shipping Weight	45-194-194: 5.5 lbs (2,5 kg) 45-195-194: 4.6 lbs (2,1 kg)
Warranty	3 years

Americas Sales and Corporate Headquarters

St. Paul, MN USA
(800) 888-8458
+1-651-681-7600
www.ergotron.com
sales@ergotron.com

EMEA Sales

Amersfoort, The Netherlands
+31 33 45 45 600
www.ergotron.com
info.eu@ergotron.com

APAC Sales

Tokyo, Japan
www.ergotron.com
apaccustomerservice@ergotron.com

Worldwide OEM Sales

www.ergotron.com
info.oem@ergotron.com

