

MONITOR EASY TRACK

Turn your table or built-in into a reading station



Convert your existing desk or table into a reading station — Monitor Easy Track installs right on top with the help of 4 through-bolts. Note: for optimal depth adjustment, your work surface should be at least 30" deep.

For the ultimate display control, attach the Monitor Easy Track to your existing table, desk, or countertop. Reduce eye strain by sliding monitors forward and backward in unison with fingertip ease. Customize to your unique modality with optional kits to hold up to 6 displays. Fine-tune monitors (vertical, lateral, and side-to-side tilt) to align and angle seamlessly.



Basic unit measures 32" wide and comes with one monitor knuckle. Add kits to fit your modality.




Slide the entire bank of monitors in unison to the focal depth you need.

Product #	METBK (Black metal)
Style and size	At 32" wide, it installs atop your existing table, moving forward and back along a 10" range.
Overall weight capacity	130 lbs.
Monitor controls and configurations	Monitor Easy Track™: Manually slide an array of up to 6 monitors forward and back in unison to your optimal focal depth.
Additional features	<ul style="list-style-type: none"> • Comes complete with a 30"w boom and one monitor knuckle. • Choose from optional kits to support your modality (2+1, 4+1, and large dual-width displays. See accessories.). • Each knuckle comes with 15ft. DVI-D cable.
Delivery and installation	Ships assembled. Shipping weight: 44 lbs. Installs with four through-bolts on any surface at least 30" deep.

See Monitor Easy Track Accessories on the next page >

MONITOR EASY TRACK ACCESSORIES


Monitor Knuckles



- Choose from Standard and Super Knuckle based on the weight of your display. Knuckles slide into the monitor track and rest on the monitor block which adjusts in height in 1" increments. The monitor track attaches to the boom or boom extension at any position horizontally. Reposition the track's lateral position easily by loosening a single knob.
- Each knuckle provides tilt and swivel adjustment.
- The Standard knuckle (RADKNABK) supports displays up to 35 lbs and comes with VESA 75mm and 100mm pattern. The knuckle slides into the monitor track with 7" height adjustment in 1" increments. Fine tune the monitors' height and yaw using a pair of screws.
- For larger displays weighing 25-60 lbs, choose the Super knuckle (RADKNBBK). This knuckle also slides into the monitor track with 5" height adjustment in 1" increments and fine-tune adjustment for height and yaw.
- Need to stack two standard displays for your RIS, dictation, or other system? Add the Monitor Easy Track Vertical Extension (RADMVBK). It installs on the center boom or on a Monitor Extension and comes with two knuckles. Supports two displays, one above the other, up to 35 lbs total and up to 17" apart, center to center.
- Each table and Monitor Easy Track appliance comes with one Standard Knuckle. Add additional to support your modality.
- Each knuckle comes with a 15-ft DVI-D cable to route from your display, through the table's cable management system, and to your computer. At 15 feet long, it reaches all the way from your display to your CPU no matter how you adjust the Monitor Easy Track so connections on both your display and your CPU are protected. Cable is capable of transmitting resolution value of 2560x1600 at 60 hz.

PRODUCT	Weight Capacity	Shipping Weight	Part #
Standard Monitor Easy Track Knuckle	35 lbs.	10 lbs.	RADKNABK
Super Monitor Easy Track Knuckle	25-60 lbs.	12 lbs.	RADKNBBK
Monitor Easy Track Vertical Extension	35 lbs.	15 lbs.	RADMVBK

Monitor Boom Extension

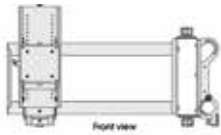

- Add more displays to your Monitor Easy Track with this Extension! Installs on the end of the center boom (or add one to each end) and measures 20" wide. Supports 35 lbs. Position extensions so they extend straight off the end of the boom or angle them toward you for a cockpit feel.
- Comes with a single knuckle plus hardware to attach the extension to your table or Monitor Easy Track appliance. Add more as space allows. Includes a 15-ft DVI-D cable to route from your display, through the table's cable trough, and to your computer.

PRODUCT	Weight Capacity	Width	Shipping Weight	Part #
Monitor Extension	35 lbs.	20"	19 lbs.	RADMEBK

Monitor Kits



- Need to support a standard modality? Choose a pre-configured kit to make it simple! Available for 2+1 and 4+1 modalities plus corresponding modalities using double-wide Large Displays.
- The 2+1 modality kit includes one Monitor Extension (which includes one Standard knuckle) plus an additional Standard Knuckle to add a second display to the center boom. The single Monitor Extension supports 35 lbs.
- The 4+1 modality kit comes with two Monitor Extensions (each with one Standard knuckle) plus two additional Standard Knuckles. These go with the single Standard knuckle that comes on the center boom. Each Monitor Extension supports 35 lbs.
- The LD+1 modality kit comes with one Monitor Extension (which includes one Standard knuckle) plus a Super knuckle to support your large display on the center boom. The Monitor Extension supports 35 lbs.
- The LD+2+1 modality kit comes with two Monitor Extensions (each with one Standard knuckle) plus one Super knuckle to support your large display on the center boom. The center boom comes with a Standard knuckle which supports one of the standard diagnostic displays. Each Monitor Extension supports 35 lbs.

PRODUCT	Weight Capacity	Shipping Weight	Part #
2+1 Kit	29 lbs.	31 lbs.	RAD21BK
4+1 Kit	58 lbs.	58 lbs.	RAD41BK
LD+1 Kit	30 lbs.	33 lbs.	RADLD1BK
LD+2+1 Kit	50 lbs.	52 lbs.	RADLD21BK

For inquiries, call our friendly and knowledgeable Sales Team at **800.325.3841**, drop us a line at sales@anthro.com, or download more info at anthro.com.

