

ergotron®

StyleView® 42 (SV42) – SLA or LiFe Battery Powered Documentation Cart with Optional Drawers

Choose the StyleView medical cart that best meets your caregiving needs, style and workflow. Our market-leading StyleView carts include all the features that caregivers ask for, with all the open architecture and quality construction that IT departments require.



SV42 SLA-powered LCD Pivot cart

Innovative documentation cart for the point of care

Two power option choices:
SLA battery (Sealed Lead Acid) or LiFe battery (Lithium Iron Phosphate)

Three choices of display mounts

Truly ergonomic design

Lightweight cart with a small footprint

Customize with storage and accessories

Ships fully assembled


Highlights

- Effortlessly maneuver to the point of need with ultra-smooth gliding casters
- Stay productive with our SLA- or LiFe-powered carts with certified power systems
- Ergonomically accommodates the widest height range of users when sitting or standing
- Offers effortless sit-stand height adjustment using patented Constant Force™ technology
- Compact footprint fits in space-constrained areas
- Open-architecture design accommodates multiple configurations: Closed notebooks with monitor, CPU and monitor, thin clients, tablets, all-in-one computers and future hardware upgrades
- Surfaces are treated with antimicrobial
- Passes Ergotron's 10,000-cycle motion test, ensuring at least five years of trouble-free height adjustment
- Supports comfortable typing with an adjustable back-tilt keyboard tray
- Entire system (cart and power) is tested and fully certified for patient, caregiver and facility safety

Choose display mount type:



Laptop:
SLA: #SV42-6101-X*
LiFe: #SV42-6102-X*

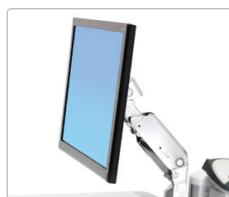

LCD Arm:
SLA: #SV42-6201-X*
LiFe: #SV42-6202-X*



LCD Pivot:
SLA: #SV42-6301-X*
LiFe: #SV42-6302-X*

* Due to regional power requirements, part numbers vary by country. See ergotron.com for specific part numbers.

ERGONOMICS:

Ergonomic back-tilt keyboard tray with a left or right mouse tray keeps wrists in a neutral position to avoid repetitive-stress injuries while increasing comfort and productivity.

Designed for users 5'0" to 6'1" (152 to 185 cm) tall and for ongoing sitting or standing applications.

Large adjustment range helps shorter and taller users work comfortably and productively whether seated or standing.

SAFETY:

Tested to UL/EN/IEC and FCC Part 15 Class A specifications for enhanced patient safety.

Environmentally clean with RoHS, REACH, WEEE and EU (94/62/EC) packaging compliance.

Includes surfaces treated with antimicrobial for product protection and smooth handles for improved cleanability.

Durable, easy-to-clean exterior composed of aluminum, high-grade plastic and zinc-plated steel promotes infection control.

Includes lockable and ventilated storage for closed notebook, thin client or CPU with heavy-duty keys and locks.

Four ultra-smooth gliding casters create easy push-pull mobility with two locking casters for stability.

Provides additional security with CPU lock inside the storage compartment.

(continued)

DIMENSIONS AND WEIGHTS:

LCD Pivot or LCD Arm: Storage compartment for closed notebook, thin client or CPU: 17.75" x 14.75" x 4" (45W x 37,5D x 10,1H cm); larger computers can mount to rear of cart with Universal CPU Holder accessory (#80-105-064)

Compact wheel-to-wheel base dimensions: 15.5" x 17" (39,4 x 43,2 cm)

Cart weight:

SLA-power: 126 lbs (57,2 kg); **LiFe-power:** 93 lbs (42,3 kg)

Shipping dimensions: 24.5" x 34" x 56" (62W x 87D x 142H cm)

Shipping weight:

SLA-power: 159 lbs (72 kg); **LiFe-power:** 127 lbs (57,7 kg)

PRODUCTS INCLUDE:

LCD Pivot* or LCD Arm*, worksurface, CPU lock, secure CPU compartment, four-port USB hub, scanner holder bracket, mouse holder, wrist rest, back-tilt keyboard tray, left/right mouse tray, keyboard lights, rear handle, storage basket, cable storage, four casters (two locking), 3 m (10') coiled cord, three AC outlets, power system user interface, StyleLink SKY software, plus:


LiFe-powered carts: 40 Ah Power System with one 40 Ah, 12V DC, Lithium Iron Phosphate (LiFe) battery. Warranty: Five years for mechanical components, two years on power module; five years on LiFe battery (including two-year capacity guarantee)

SLA-powered carts: 66 Ah power system with two 33 Ah, 12V DC, Absorbed Glass Mat (AGM), valve-regulated batteries with supporting electronics. Warranty: Five years for mechanical components, two years on power module

* Laptop version does not include a LCD Pivot or LCD Arm

- ① Supports displays up to 24" and provides 25 degrees of tilt and 90° rotation
 - LCD or laptop and worksurface adjust 20" (51 cm) in tandem
 - LCD Pivot adjusts 5" (13 cm) independently
 - Maximum LCD height adjustment = 25" (63 cm)
- ② Scanner holder bracket
- ③ Spacious worksurface: 22.4" W x 19.75" D (56,7W x 50,2D cm)
- ④ Back-tilt keyboard tray, wrist rest and mouse holder; four amber LEDs provide light over keyboard tray
- ⑤ Rear storage basket keeps task-related items close for easy access
- ⑥ T-slot channel interface on the column allows you to integrate drawers and accessories
- ⑦ Four 4" (10,2 cm) casters; two front casters are lockable
- ⑧ Wheel-to-wheel base dimensions: 15.5" x 17" (39,4 x 43,2 cm)
- ⑨ Three receptacle power strip located in the CPU storage compartment (Americas) or in the base (EMEA/APAC)

SV42 SLA-powered LCD Pivot cart

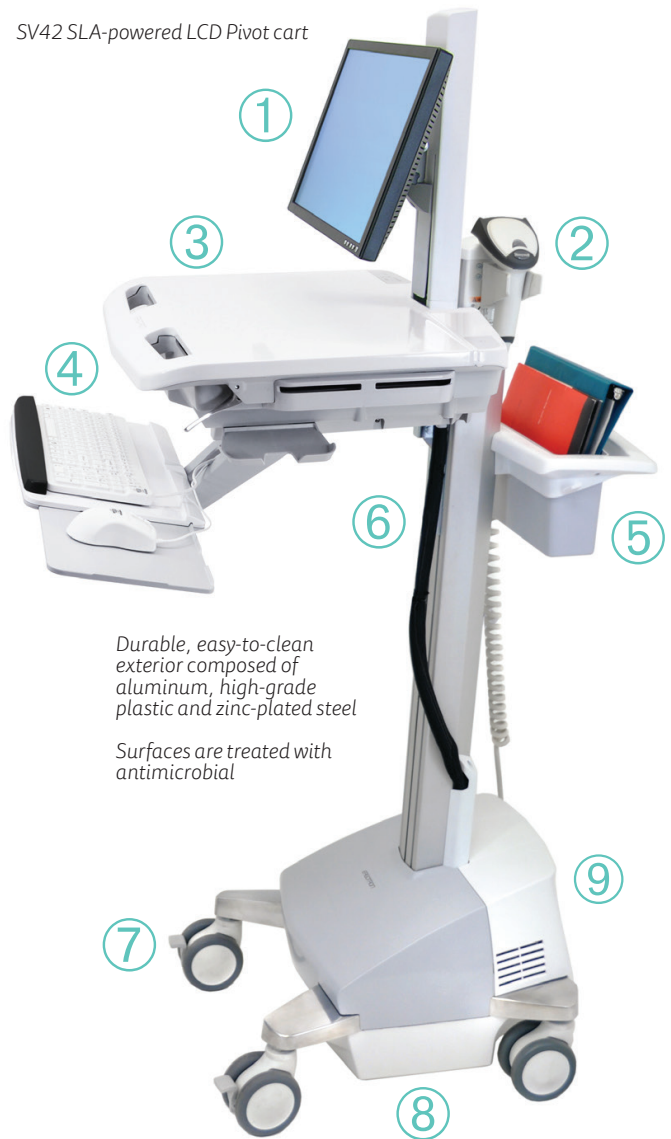

Durable, easy-to-clean exterior composed of aluminum, high-grade plastic and zinc-plated steel

Surfaces are treated with antimicrobial

	Typical LCD Size	Weight Capacity	Lift	Tilt	Pan	Rotation	VESA
Powered SV42	LCD	≤ 24" 15,9 kg (35 lbs) See website	Arm 27" (68,6 cm) Lift Pivot 25" (63,5 cm)	Arm 65° Lift Pivot 25°	Arm 180° Lift Pivot 24°	Arm 360° P/L Lift Pivot 90° P/L	MIS-D
	Laptop	≤ 17" 8,2 kg (18 lbs) See website	20" (51 cm)	—	—	—	—

SEVERAL STORAGE OPTIONS AND ACCESSORIES AVAILABLE:



SV Storage Bin




Several drawer configurations



SV Front Tray



SV Sani-wipes Holder

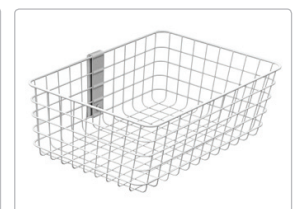

SV Wire Basket, Large

© 2019 Ergotron, Inc. 01/01/2019-EA Literature made in the U.S.A.
Ergotron devices are not intended to cure, treat, mitigate or prevent any disease. StyleView is a registered trademark of Ergotron in the U.S.A. and China. **Content is subject to change without notification**

Americas Sales and Corporate Headquarters

St. Paul, MN USA
(800) 888-8458
+1-651-681-7600
www.ergotron.com
sales@ergotron.com

EMEA Sales

Amersfoort, The Netherlands
+31 33 45 45 600
www.ergotron.com
info.eu@ergotron.com

APAC Sales

Tokyo, Japan
www.ergotron.com
apaccustomerservice@ergotron.com

Worldwide OEM Sales

www.ergotron.com
info.oem@ergotron.com

